

SQUAIR MONITOR

INSTRUCTION MANUAL

know what you breathe

CONTACT

Address

706, 7th floor, Crown
heights, Rohini Sec-10,
New delhi-110085, India

Phone



73918-73918

Online

Email : info@purelogic.in
Website : www.pranaair.com

GETTING STARTED

KNOW YOUR SQUAIR

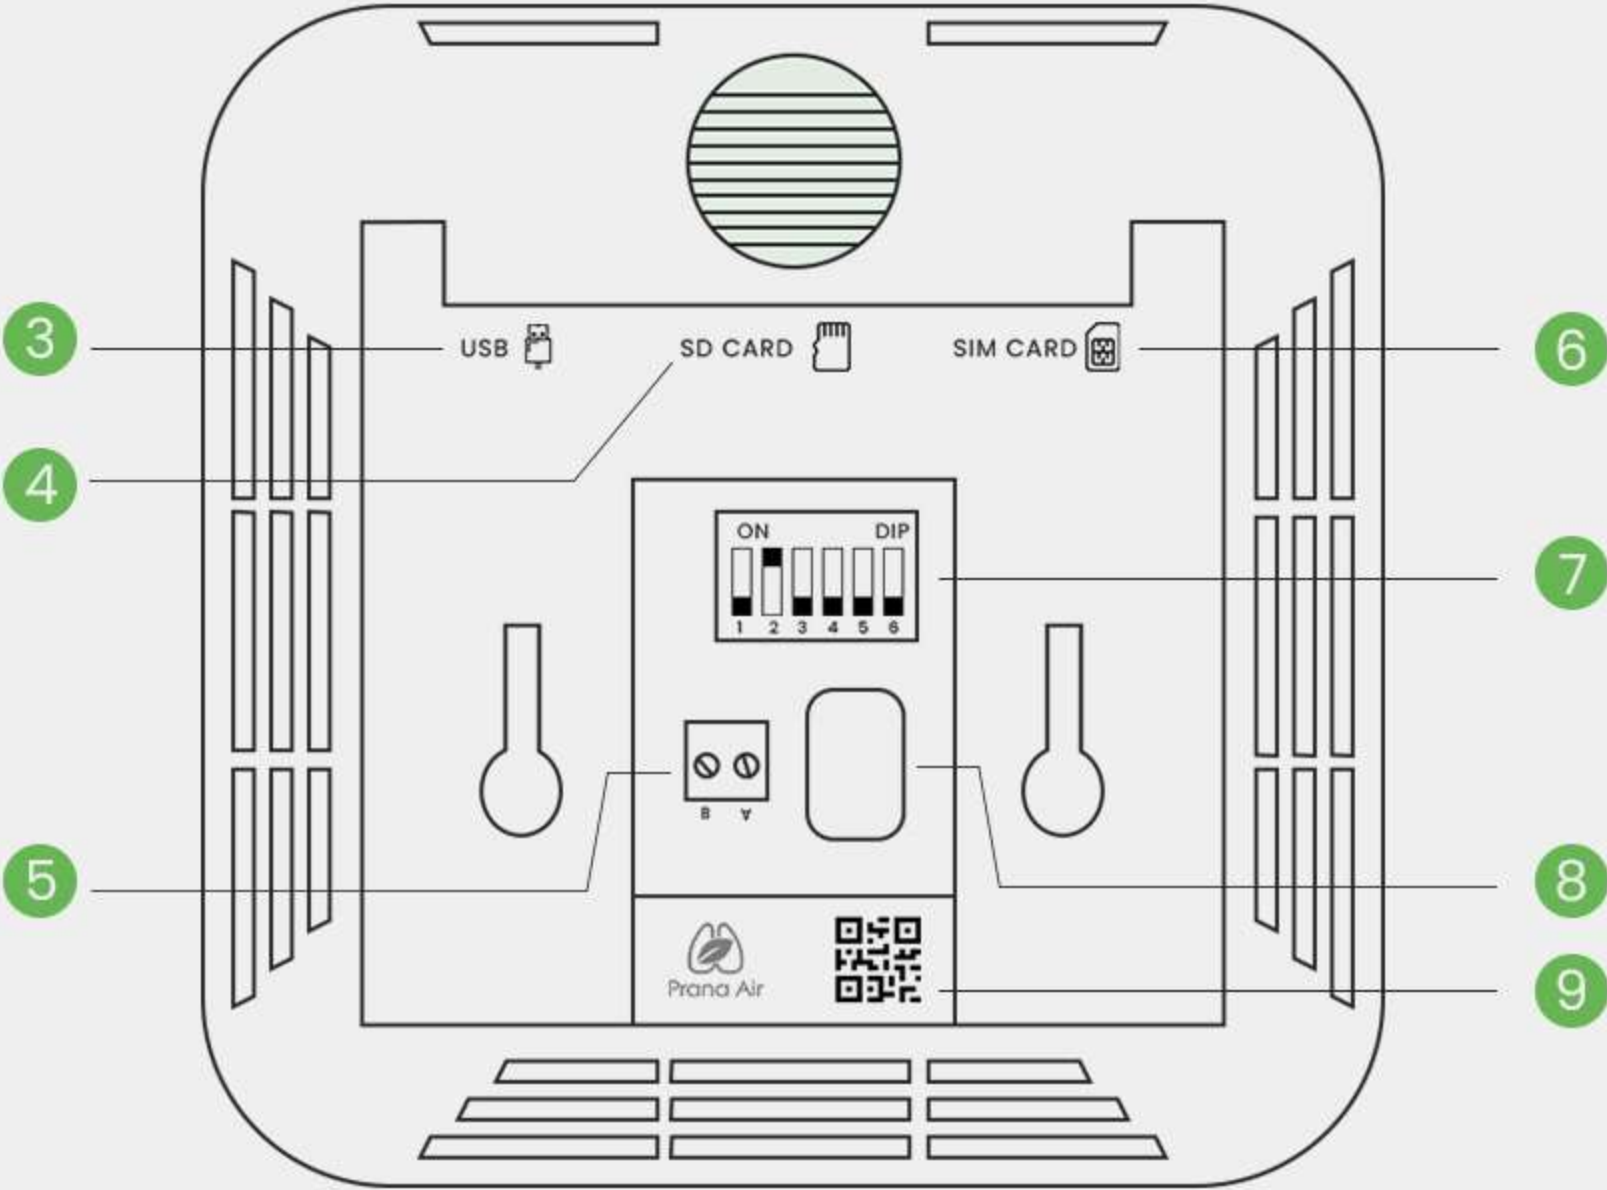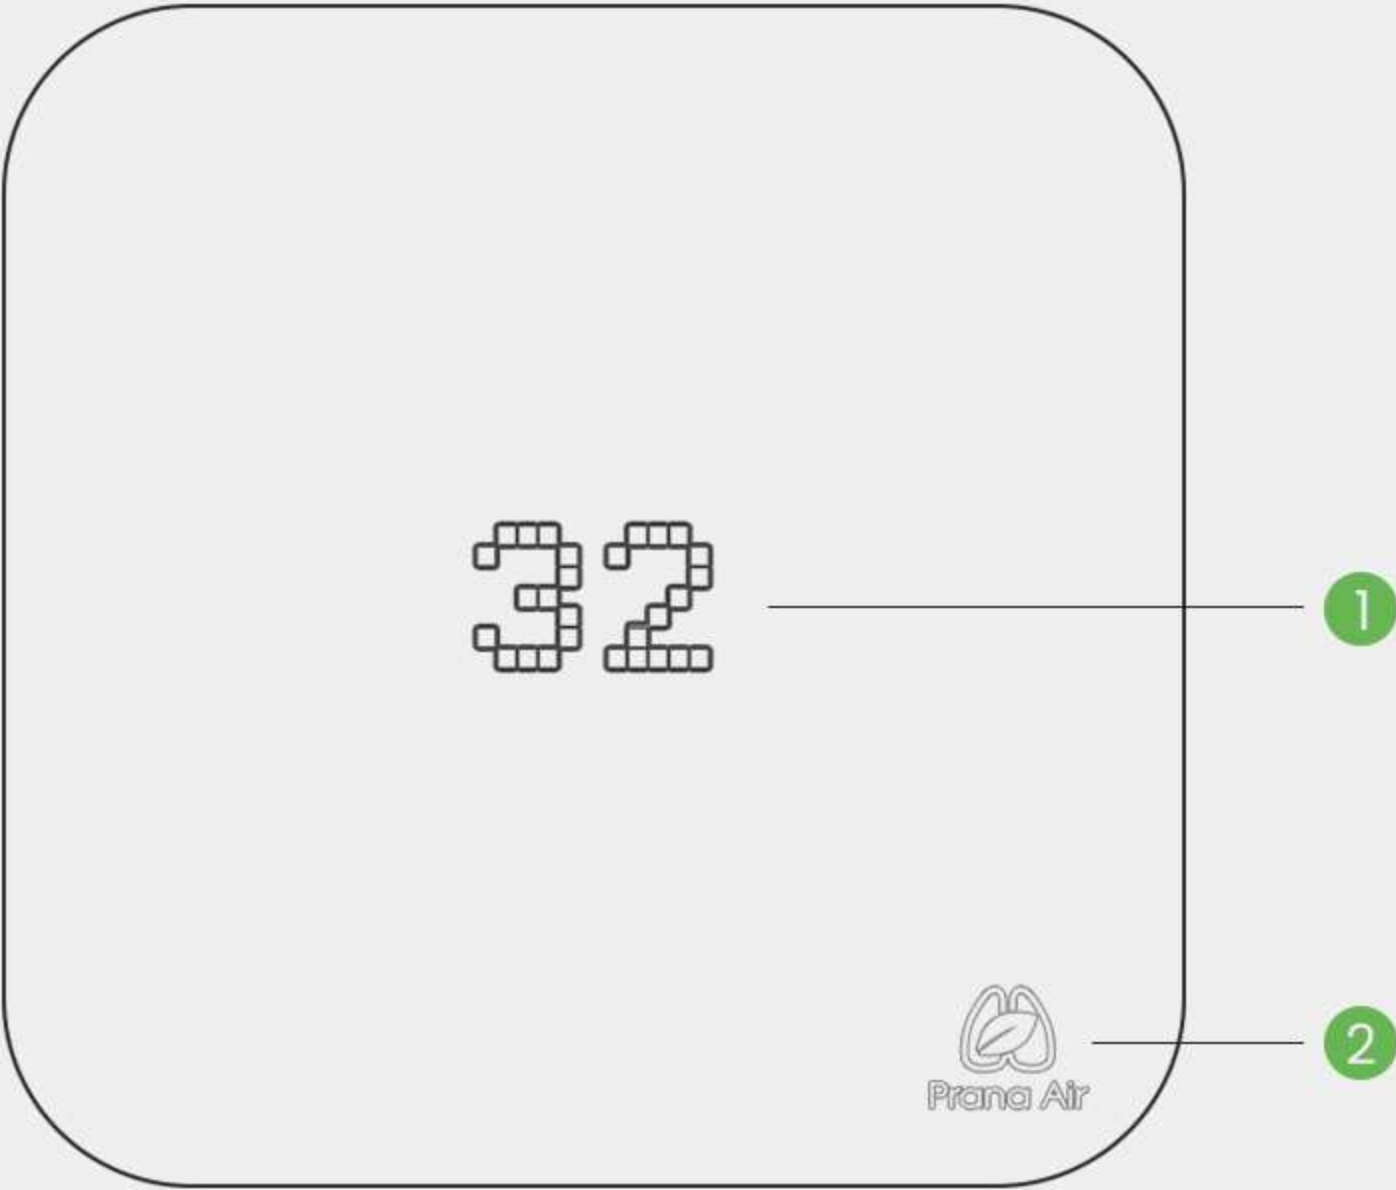


For your reference :


- | | | | | |
|-------------------|--------------------|-----------------|----------------------|----------------|
| 1. LED light | 2. Button | 3. USB inlet | 4. SD Card inlet | 5. RS485 inlet |
| 6. SIM Card inlet | 7. Control buttons | 8. Power socket | 9. Device id QR Code | |

HOW TO CONNECT


- 1 On the back side of your SQUAIR make sure switch Number 2 is ON and rest all switches are down.

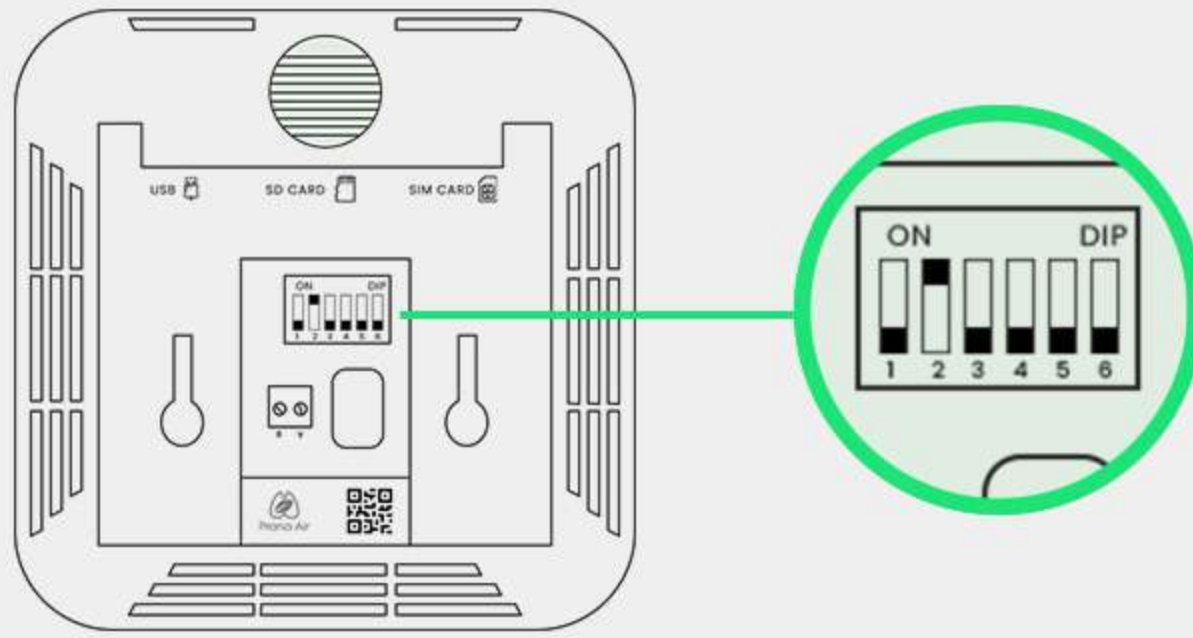

- 2 Put your SQUAIR in AP mode, long press Prana air logo until you see "AP" on the LED Screen.

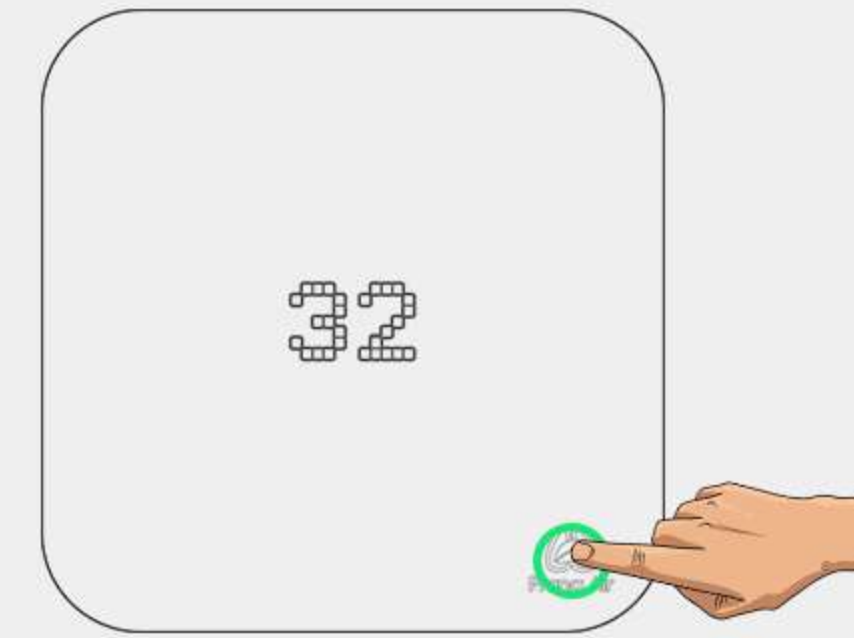

- 3 Search for "Air monitor _ (your device id)" network in your phone's Wi-Fi settings and connect to it with password "12345678"

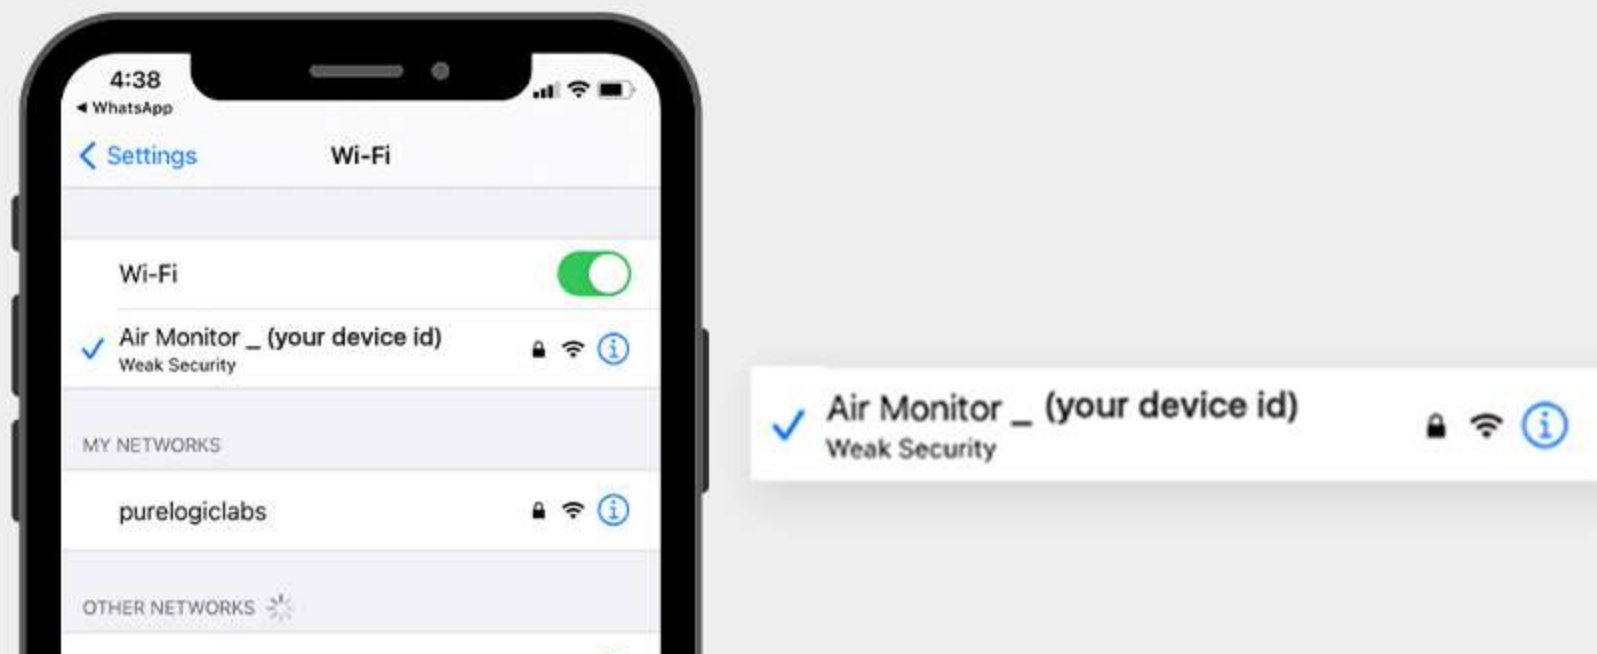


- 4 Open your browser and type "192.168.4.1" in the address bar. SSID: Select the wifi you want your SQUAIR to connect.




HOW TO CONNECT


- 5 Open AQI App on your phone and create an account or simply log in if you already have one. Go to my devices and select SQUAIR from the given options

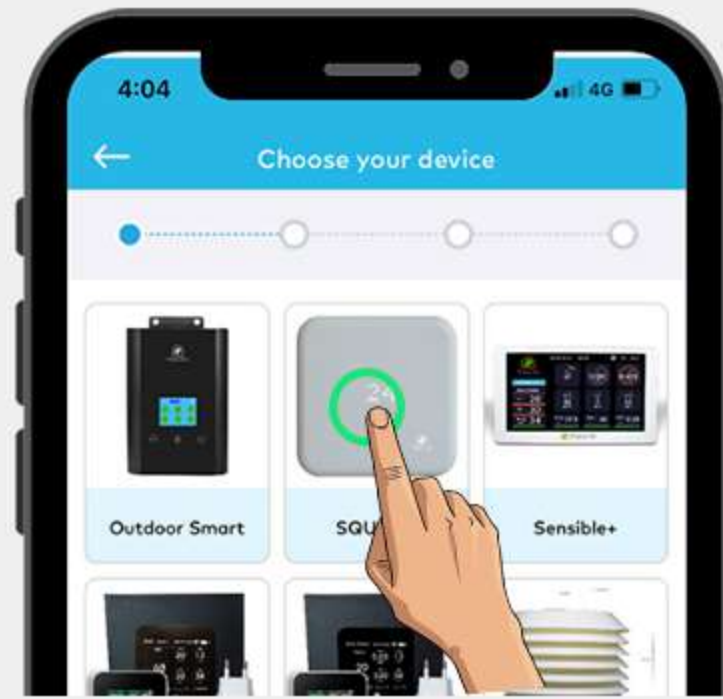

- 6 Enter the Device ID printed on the back side of SQUAIR or scan the QR code printed there. Configure the device name of your choice.

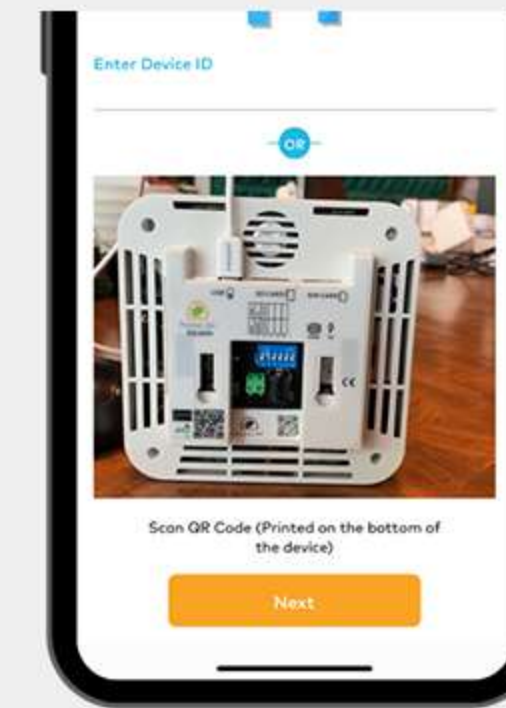

- 7 Your device is now connected successfully, the data will be shown in the AQI dashboard.

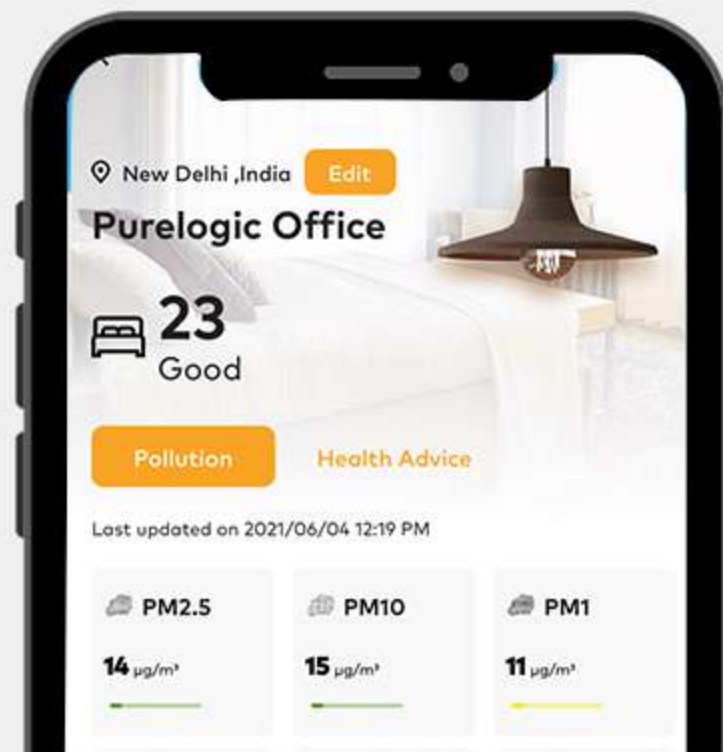

- 8 Place the SQUAIR Monitor anywhere inside your home, office, restaurant, clinic etc.





Prana Air

Visit us :

www.pranaair.com